

User Guide

Congratulations for having chosen this fun product!

Before use please read the instructions below carefully.

Included in this box: The device itself + USB cable + this manual with guaranty conditions.

The easy to use 3 buttons interface lets you control the speed of the back-and-forth motion among 7 different speeds and the 10 speeds of the clitoral vibrator at fingertips. It is made of 100% silicone and a touch of ABS. 2 LED light indicates use of the interface. Only use water-based lubricant with this device.


Battery (rechargeable, Li-Ion 700 mAh 3.7V)

Charge fully before first use.

1- Carefully insert the plug at the base of the unit so that it is perpendicular to it.

(Be careful to insert the plug perpendicular to the device to avoid damaging it, see illustration)



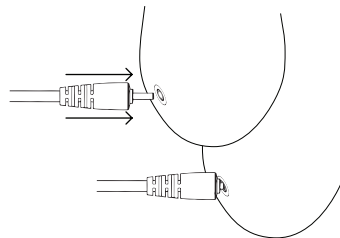


2- Insert the cable into a USB computer plug or use a 110V adapter with USB support.




IMPORTANT:

- That adapter of 110V must not exceed 1000mAh, because it can damage your device.
- When charging: Shows red light blinks.
- When fully charged: Shows solid red light, then unplug the cable.
- Low Battery Warning: Shows red light flashes.
- Do not use your device while charging.
- Charging time 120 minutes.
- **Do not use the device for more than 30 minutes continuously. Due to its high power, the appliance may start to heat up.**
- **This device is not waterproof. Never immerse or put under the tap.**

Using

- 1- Hold the  button for 3 seconds to switch on the device.
- 2- Device ON: Shows solid red light.
- 3- Press  or  button to select one of the 7 speeds of the back-and-forth motion.
- 4- Press the  button to select one of the 10 vibration modes for the clitoral vibrator.
- 5- Hold the  button for 3 seconds to switch off the device.

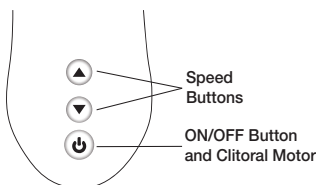

Cleaning, storage and safety

- The lifespan of your vibrator will be greatly increased with proper maintenance and care.
- We recommend not to use any silicone-based lubricant with this device. A water-based lubricant is the best choice. Never use massage oil or massage cream as a lubricant for your device.
- Always clean your device thoroughly before and after each use. The best is to use an antibacterial cleaner, if you don't have an antibacterial cleaner handy, at least wash under warm water with mild soap, rinse and dry with a lint-free cloth or towel. Never use alcohol or petroleum-based cleaners. NOTE: we strongly suggest you have an antibacterial cleaner for maximum hygiene care.
- Avoid leaning your device in direct sunlight and never expose to extreme heat. Also, please be aware that your device should never be used at temperature under 2 degrees Celsius. Using your device at such a low temperature may cause damage and/or discomfort.
- To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations.

DISCLAIMER:

This product is sold as a novelty purpose only. No businesses and/or their owners or personal are responsible for any injury caused by the use of this product. This product doesn't claim to cure any disease or STI.

Thank you for having read these instructions and we wish you a lot of pleasure.

One Year Limited Guarantee

Congratulations on acquiring this article. We thank you for your confidence and hope that you enjoy our product.

1 YEAR LIMITED GUARANTEE. The distributor warrants this product to be free from manufacturing defects for a period of one year from the date of purchase. Should any defect be discovered within one year of the date of purchase, the following should be used in claiming guarantee:

IMPORTANT: This guarantee does not cover your personal satisfaction or misuse of the product. It only covers the mechanical shortcomings of your device. You cannot return your device for a repayment; you can only return it for repairs if that is the case (any expenses including freight for returning your device, are not refundable).

IMPORTANT: Never send your device by C.O.D. freight, it will be refused. You must pay the freight when you return a device to us and add \$15.00 for handling in Canadian currency for Canada and US currency for all other countries, in form of a money order or bank draft payable to S.D. Variations inc. (no personal checks will be accepted).

S.D. Variations Inc. commits to either repair or replace the deficient pieces or the product, under conditions that the product is returned at the sender's expenses at: S.D. Variations inc., P.O. Box 1700 Succ. St-Martin, Laval, QC, Canada H7V 3P9; accompanied by proof of purchase and with its original packaging. A letter detailing the nature of the defect will accelerate the process. Be certain that the appliance is wrapped carefully when shipped.

The guarantee does not apply to any unit that has been tampered with, nor to damages incurred through negligence in use or faulty storage.

DELIVERY: There is an average delay from 3-6 weeks after we get your item until you receive it back.