

User Guide

Congratulations for having chosen this fun product!

Before use please read the instructions below carefully.

Included in this box: The device itself + USB cable + this manual with guaranty conditions.

The easy-to-use 2-button interface allows you to control the vibration and acupressure of the device with your fingertips in 6 different modes. It is made of 100% silicone and a touch of ABS. 1 LED light indicates use of the interface. Only use water-based lubricant with this device.

Battery (rechargeable, Li-Ion 700 mAh 3.7V)

Charge fully before first use.


1- Gently insert the plug in the circle at the base of the device, below the 2 buttons.

2- Insert the cable into a computer's USB socket or use a 110V adapter (not included) that accepts USB cables.

IMPORTANT:

- When charging: Shows a white blinking light.
- When fully charged: Shows solid white light, then unplug the cable.
- Do not use your device while charging.
- Charging time 120 minutes.
- **This device is not waterproof. Never immerse or put under the tap.**

Using

1- Press the button  for 3 seconds to unlock the device.

Once it is turned on: a continuous white light will light up on the button .

2- Press the button  again to select one of the 6 vibration modes.

To pause the vibration, press the button  twice quickly. To restart the vibration, press the button twice again.

3- Press the button  to select one of the 6 acupressure modes.

To pause the acupressure, press the button  twice quickly. To restart the acupressure press twice again.

4- Press and hold down the button  for 3 seconds to close the device.

5- You can also activate the travel lock once the item is closed. Simply press the buttons  &  for 5 seconds.

To deactivate the travel lock, press the buttons  &  for 5 seconds and repeat step 1 to reuse the item.



Cleaning, storage and safety

- The lifespan of your vibrator will be greatly increased with proper maintenance and care.
- We recommend not to use any silicone-based lubricant with this device. A water-based lubricant is the best choice. Never use massage oil or massage cream as a lubricant for your device.
- Always clean your device thoroughly before and after each use. The best is to use an antibacterial cleaner, if you don't have an antibacterial cleaner handy, at least wash under warm water with mild soap, rinse and dry with a lint-free cloth or towel. Never use alcohol or petroleum-based cleaners. NOTE: we strongly suggest you have an antibacterial cleaner for maximum hygiene care.
- Avoid leaning your device in direct sunlight and never expose to extreme heat. Also, please be aware that your device should never be used at temperature under 2 degrees Celsius. Using your device at such a low temperature may cause damage and/or discomfort.
- To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations.
- If not used for a period over 3 months and to maintain the battery power, you should put a full charge at least every 3 months.

DISCLAIMER:

This product is sold as a novelty purpose only. No businesses and/or their owners or personal are responsible for any injury caused by the use of this product. This product doesn't claim to cure any disease or STI.

Thank you for having read these instructions and we wish you a lot of pleasure.

5 Years Limited Guarantee

Congratulations on acquiring this article. We thank you for your confidence and hope that you enjoy our product.

5 YEARS LIMITED GUARANTEE. The distributor warrants this product to be free from manufacturing defects for a period of 5 years from the date of purchase. Should any defect be discovered within 5 years of the date of purchase, the following should be used in claiming guarantee:

IMPORTANT: This guarantee does not cover your personal satisfaction or misuse of the product. It only covers the mechanical shortcomings of your device. You cannot return your device for a repayment; you can only return it for repairs if that is the case (any expenses including freight for returning your device, are not refundable).

IMPORTANT: Never send your device by C.O.D. freight, it will be refused. You must pay the freight when you return a device to us and add \$15.00 for handling in Canadian currency for Canada and US currency for all other countries, in form of a money order or bank draft payable to S.D. Variations inc. (no personal checks will be accepted).

S.D. Variations Inc. commits to either repair or replace the deficient pieces or the product, under conditions that the product is returned at the sender's expenses at: S.D. Variations inc., P.O. Box 1700 Succ. St-Martin, Laval, QC, Canada H7V 3P9; accompanied by proof of purchase. A letter detailing the nature of the defect will accelerate the process. Be certain that the appliance is wrapped carefully when shipped.

The guarantee does not apply to any unit that has been tampered with, nor to damages incurred through negligence in use or faulty storage.

DELIVERY: There is an average delay from 3-6 weeks after we get your item until you receive it back.